

# How to Connect a Bushnell Elite 1-Mile CONX Laser Range Finder with a Kestrel 5700 Ballistics/Elite LiNK Unit

## Preface:

- Make sure you have a LiNK (i.e. Bluetooth) model Ballistics Kestrel.
- Please update the Kestrel and rangefinder to the latest version of the firmware for best results.

## Getting Started:

### On the Bushnell CONX unit:

- 1) Press the fire button to turn on the CONX Rangefinder.
- 2) Press and hold the Mode button for 2 seconds and release.
- 3) Click the Mode button to toggle between brightness settings. Select choice using the Fire button.
- 4) Next click the Mode button until AB appears in the viewfinder. Press Fire button to select.
- 5) Click the Mode button if you want to change the units (Yards/Meters). Press Fire button to continue.

### On the Kestrel 5700 unit

- 1) Turn on the Kestrel.
- 2) Press the top left (gear) button to go to the Main Menu.
- 3) Scroll down to Bluetooth. Make sure it is set to ON. Then click the center button.
- 4) Make sure Conct is set to Device. Use right arrow to change if not set on Device.
- 5) Next highlight Name and press the center button. The device should show "Searching for Devices". Within a couple seconds, it should pick up the CONX device. *If range finder timed out, repeat step 1 from CONX section again.*
- 6) When you see the device name appear, click on it with the center button.
- 7) You can rename the device if you want. Highlight Lock and press the right arrow to turn Lock to ON.
- 8) Exit out using the gear button. A Bluetooth symbol should be showing in the top right of the Kestrel screen.
- 9) Lase your target and the Kestrel range and inclination angle should get populated.